



Operation manual of ME23

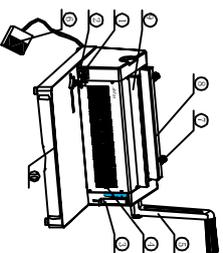


- ① side margin control
- ② punch margin control
- ③ double-wire selector
- ④ 23 die disengagement pin
- ⑤ bind handle
- ⑥ foot pedal
- ⑦ adjustable knob
- ⑧ wire closing bar
- ⑨ fixed board for clamping
- ⑩ waster/darver

1. Select the punch margin control to bind according to the document's size. Insert the documents. Then read the foot pedal and complete the punch. (See the Drawing a)

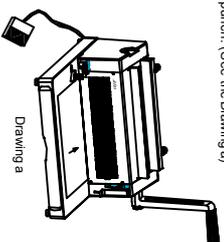

2. Adjust the two adjustable knobs in terms of the size of the double wire.
3. Use the bind handle to close the double wire to the requested size. (See the Drawing b)

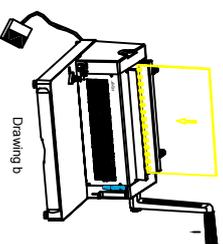

Attention:

To protect the machine for longer lifetime, follows are our suggestion:

1. The best punching capacity is 20 sheets each time.
2. Do not punch adhesives and any adhesive sheets.

Technical Guide

Description	Electric wire binding machine
Model	ME23
Pitch	2:1 (23 holes)
Punch Thickness	25 sheets 70g
Punch plastic cover	Less than 4 sheets(0.2mm)
Certification	CE ETL
Punch speed	18000 sheets/hour
Machine Dimension	480X395X280mm
Weight	20KG

Warning

1. Read all safety and operating instructions before using this product.
2. All safety and operating instructions should be kept for future reference.
3. Read and understand all warnings listed on the operating instructions.
4. Follow all operating instructions to operate this product.
5. This product should not be used near water, i.e. Bath tub, sink, swimming pool, wet basement, etc.
6. Only use dry cloth to clean this product.
7. Do not block any ventilation openings. It should not be placed that against a wall or placed in a built-in enclosure that will impede the flow of cooling air.
8. Do not install this product near any heat sources, such as, radiators, heat registers, stove or other apparatus that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord being walked on or pinched, particularly at Plugs, convenience receptacles and the point where they exit from the apparatus. Do not break the ground pin of the power supply cord.
11. Only use attachments specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Care should be taken so that objects do not fall and liquids are not spilled into the unit through the ventilation ports or any other openings.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as, power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
17. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.