

Product instruction manual
ID Pouch Laminating System
Peak ID - PP-110A



Peak laminators have been designed to be user friendly, however we strongly recommend you take a few minutes to read through this manual to ensure correct operation.

Keep this manual safe for future reference.



Thank you for purchasing the Peak ID PP-110A. Peak laminators are designed to give you professional, high quality results, quickly and easily. Please take a few minutes to read through this important document as any **damage caused to your laminator by user error is not covered under warranty.**

How to use your laminator


- 1) Carefully remove the laminator from all of its packaging and place it on a flat, level surface. Make sure you keep the original packaging somewhere safe (in case this is needed in the future).
 - 2) Unpack the power cable and insert it into the power outlet at the back of the laminator. Plug it in to a power socket. Press the POWER switch to turn the laminator on. The light will illuminate.
 - 3) Check that the FWD/REV (Forward and Reverse) switch is set to FWD (See diagram 1).
 - 5) Set the HEATER switch to ON.
 - 6) The laminator will now begin to heat. Once it has reached the set temperature, the READY light will illuminate.
 - 7) Place the document you are laminating inside the pouch, making sure that it is centrally positioned and that a small border (approx 3-5mm) is left around the edge.
 - 8) Once the document is positioned in the pouch. Insert the prepared document into the laminator. Make sure you insert the SEALED EDGE FIRST and do not insert at an angle. The item will automatically feed through and appear the other end.
- ! Pay attention as you laminate and watch for your document appearing out of the exit at the back of the laminator. If you do not see the document appearing after several seconds, press the REVERSE switch to avoid a potential jam and the document wrapping around the rollers.
- ! When you see your document appear at the exit, wait until it becomes free and do not tug or pull it.
- 9) To turn the laminator OFF after use, set the HEATER switch to OFF and allow the laminator to still run for 5 minutes (you will hear the rollers turning). This allows the laminator to cool down and it is then safe to turn OFF.



Don't overlap



Leave a 5mm border

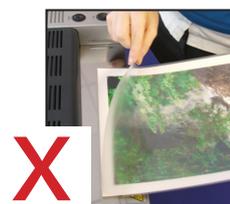

Don't laminate open end first

Parts and Features

Diagram 1



Technical Specifications

Laminating speed:	450mm/minute
Laminating width:	110mm
Maximum pouch thickness:	360 micron
Laminating temperature:	100-160°C
Power supply:	AC 100, 110, 220, 240V/50Hz, 60Hz
Power consumption:	250W
Dimensions:	210 x 170 x 90mm
Weight:	4kgs
Warranty:	1 year

Safety!

- Always remember to switch your pouch laminator off after use. Leaving it on for long periods can cause damage to the laminator and is a health and safety hazard
- **NEVER** laminate metal objects such as keys or coins
- **NEVER** use the laminator near water and do not leave the laminator next to a hot area such as a radiator
- Always wrap the power cord around safely after use and do not leave it dangling where it could cause an accident
- Do not allow children to use the laminator, unless supervised
- If your laminator stops working, do not try to fix it yourself by disassembling the machine. Contact your supplier for advice
- Do not operate the laminator if the power cable is damaged in any way
- Do not use this appliance for anything other than it's intended purpose
- During use please take care that no clothes, neckties, hair, necklaces etc are near the machine otherwise injuries could occur
- Do not use this appliance with the cover open
- Do not use this appliance for anything other than it's intended purpose

FAQ'S

My document has come out cloudy - what does this mean?

This means that the temperature setting is not quite hot enough. Try increasing the temperature by 5°C and try again as applying more heat should fix the problem.

My document has come out wavy - what does this mean?

If the document comes out with a wavy finish the temperature is set too high. Decrease the temperature by 5°C and try again. If you have an important document to laminate such as a photograph, it is always good to try a test document first to ensure you have the laminator at the perfect temperature.

Warranty & Incorrect Use

IMPORTANT INFORMATION

Your laminator should reach you in perfect condition, however please retain all original packaging once you have unpacked your laminator in case you need to return it. If your laminator arrives damaged or faulty in anyway, this must be reported to your supplier immediately. If you send your laminator back for repair under warranty at any time, then the warranty may be void if the laminator is not packaged correctly and as a result is damaged in transit. Unauthorised repair or attempts to service the unit will invalidate the warranty.

Your Peak Pouch Laminator includes a 1 year warranty on defective parts under normal operating conditions. THIS DOES NOT COVER any jams, misfeeds or wrap arounds caused by operator error and you will be liable for the repair costs (including delivery charges). The warranty does not cover the heated rollers. The warranty is for a period of one year from the date of purchase by the original consumer.

Please note that attempting to laminate any type of unsuitable documents (for example multiple cutouts, textiles, food matter, documents exceeding the maximum thickness or documents too large or small for the pouch) may result in jamming. Damage caused by incorrect use or failing to follow the instructions are not covered within the warranty.

