

Product instruction manual
A3 Pouch Laminating System
Peak® Instant PI-320



Peak laminators have been designed to be user friendly, however we strongly recommend you take a few minutes to read through this manual to ensure correct operation.

Keep this manual safe for future reference.



Thank you for purchasing the Peak Instant PI-320. Peak laminators are designed to give you professional, high quality results, quickly and easily. Please take a few minutes to read through this important document as any **damage caused to your laminator by user error is not covered under warranty.**

How to use your laminator

- 1) Carefully remove the laminator from all of its packaging and place on a flat, level surface. Make sure you keep the original packaging somewhere safe (in case this is needed in the future).
 - 2) Press the Main Power Switch to turn the laminator on. The main power switch is located at the back of the system on the right hand side.
 - 3) Select which micron thickness setting you need (75 micron which is 150 total, 100 micron which is 200 total or 125 micron which is 250 total) and prepare your document by placing it in the selected pouch. For cold lamination, press the Cold button. You must leave an even border around the edge of your document when it is in the pouch.
This is a card carrier free laminator but we do recommend the use of a Lifejacket® when laminating cut-up pieces.
 - 4) When the ready light turns green and you hear a beeping sound, the system is ready to start laminating.
 - 5) Feed the pouch into the front of the laminator.
 - 6) Ensure the pouch goes in straight and with the SEALED END FIRST. Once laminated, the finished document will appear at the back exit of the laminator.
- ! Do not tug or pull the document whilst it exits the laminator. Wait until it becomes free.**
- 7) If you misfeed the document, press the reverse button and the document will come back out of the system.
 - 8) To save energy and for enhanced safety, the laminator will automatically shut off when it has not been in use for 30 minutes.
 - 9) To turn off the system, simply press the power button on the right hand side.



Don't overlap



Leave an even border



Don't laminate open end first



Never laminate cut up pieces without using a Lifejacket or you risk jamming and damaging your laminator (this will not be covered under warranty).



What is a 'Lifejacket'?

The Lifejacket is a highly durable patented product made from Teflon® that should be used when laminating cut-up, odd shaped pieces (such as shapes, letters, signs as shown above) to prevent damage to your laminator and potential jamming.

Why use a Lifejacket?

- Protect your laminator from jamming
- Extend the life of your laminator by using the Lifejacket - stops adhesive seeping onto the rollers
- Eliminate repair bills as this product keeps your laminator working at an optimum level
- Available in A4, A3 and A2 sizes to protect documents of all sizes

Ask your supplier for more details.

Parts and Features



1. Power Switch I/O (Back of laminator)
2. Power button
3. Insertion slot
4. Reverse button
5. Cold lamination button
6. Ready light
7. 250 (125+125) Micron LED
8. 200 (100+100) Micron LED
9. 150 (75+75) Micron LED

Technical Specifications

Laminating speed:	500mm/minute
Laminating width:	320mm / A3
Maximum pouch thickness:	250 micron
Laminating temperature:	Preset
Cold Lamination	Yes
Warm up time:	45 seconds
Power supply:	220V-240/50Hz-60
Power consumption:	1200W
Dimensions:	470 x 146 x 123mm
Weight:	2.8kgs
Warranty:	1 year

Micron Setting Switch

The micron setting buttons allow you to laminate using 3 different laminating pouches:

- 150 micron (75 x 75mic)
- 200 micron (100 x 100mic)
- 250 micron (125 x 125mic)

Safety!

- Always remember to switch your pouch laminator off after use. Leaving it on for long periods can cause damage to the laminator and is a health and safety hazard
- **NEVER** laminate metal objects such as keys or coins
- **NEVER** use the laminator near water and do not leave the laminator next to a hot area such as a radiator
- Always wrap the power cord around safely after use and do not leave it dangling where it could cause an accident
- Do not allow children to use the laminator, unless supervised
- If your laminator stops working, do not try to fix it yourself by disassembling the system. Contact your supplier for advice
- Do not operate the laminator if the power cable is damaged in any way
- Do not use this appliance for anything other than it's intended purpose

Please note, if you do not follow the safety guidelines above and your laminator breaks, you will not be covered under warranty.

Warranty & Incorrect Use

IMPORTANT INFORMATION

Your laminator should reach you in perfect condition, however please retain all original packaging once you have unpacked your laminator in case you need to return it. If your laminator arrives damaged or faulty in anyway, this must be reported to your supplier immediately. If you send your laminator back for repair under warranty at any time, then the warranty may be void if the laminator is not packaged correctly and as a result is damaged in transit. Unauthorised repair or attempts to service the unit will invalidate the warranty.

Your Peak Pouch Laminator includes a 1 year warranty on defective parts under normal operating conditions. **THIS DOES NOT COVER** any jams, misfeeds or wrap arounds caused by operator error and you will be liable for the repair costs (including delivery charges). The warranty does not cover the heated rollers. The warranty is for a period of one year from the date of purchase by the original consumer.

Please note that attempting to laminate any type of unsuitable documents (for example multiple cutouts, textiles, food matter, documents exceeding the maximum thickness or documents too large or small for the pouch) may result in jamming. Damage caused by incorrect use or failing to follow the instructions are not covered within the warranty.

