

Product instruction manual  
A4 Pouch Laminating System  
Peak neat - PN230



Peak laminators have been designed to be user friendly, however we strongly recommend you take a few minutes to read through this manual to ensure correct operation.

Keep this manual safe for future reference.




Thank you for purchasing the Peak neat PN230. Peak laminators are designed to give you professional, high quality results, quickly and easily. Please take a few minutes to read through this important document as any **damage caused to your laminator by user error is not covered under warranty.**

## How to use your laminator


- 1) Carefully remove the laminator from all of its packaging and place it on a flat, level surface. Make sure you keep the original packaging somewhere safe (in case this is needed in the future).
  - 2) Press the ON switch to turn the laminator power on. The red power light will illuminate.
  - 3) The laminator will begin to warm up and take approx. 5-8 minutes.
  - 4) Decide which micron thickness setting you need (75 micron which is 150 total or 125 micron which is 250 total) and prepare your document by putting it in the selected pouch. You must leave at least a 5mm border around the edge of your document when it is in the pouch and if you are laminating small, cut-up or odd shaped pieces you MUST use a Lifejacket® (ask your supplier for details if you do not have one of these).
  - 5) The laminator will now begin to heat. Once it has reached the set temperature, the green READY light will illuminate.
  - 6) Once the READY power light glows green, you are ready to laminate. Feed your document and pouch into the laminator making sure it goes in straight and SEALED END FIRST. Once laminated, the finished document will appear at the exit of the laminator.
- ! Do not tug or pull the document as it comes out of the back of the laminator. Wait until it becomes free.**
- 9) Always remember to turn your laminator off after use and do not leave running for prolonged periods of time.



Don't overlap

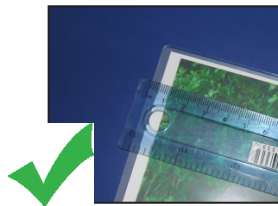

Leave a 5mm border

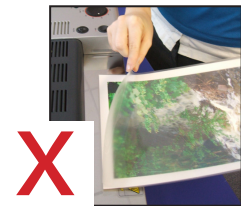

Don't laminate open end first

## Parts and Features

Diagram 1





Never laminate small, cut-up pieces without using a Lifejacket® or you risk jamming and damaging your laminator (this will not be covered under warranty)



## What is a 'Lifejacket®'?

The Lifejacket® is a highly durable patented product made from teflon® that should be used when laminating cut-up, odd shaped pieces (such as shapes, letters, signs as shown above) to prevent damage to your laminator and potential jamming. Why use a Lifejacket®?

- Protect your laminator from jamming
- Extend the life of your laminator by using the Lifejacket® - stops adhesive seeping onto rollers
- Eliminate repair bills as this product keeps your laminator working at an optimum level
- Available in A4, A3 and A2 sizes to protect documents of all sizes

Ask your supplier for more details.

## Micron Setting Switch

The micron setting switch is designed to allow you to laminate using 2 different laminating pouches (150 micron or 250 micron).

A 150 micron pouch is around 140gsm total thickness and a 250 micron pouch is around 230gsm thickness. The pouch you choose depends on the type of document you have and how thick you want the end result to be.

A photograph for example may require a 150 micron pouch if it is going to be used for display purposes, but something like a menu may need a 250 micron pouch to give it more rigidity.

Ask your supplier if you are unsure of which pouch to use.

## Technical Specifications

<b>Laminating speed:</b>	300mm/minute
<b>Laminating width:</b>	230mm
<b>Maximum pouch thickness:</b>	250 micron (125 micron per side)
<b>Laminating temperature:</b>	115-125°C
<b>Warm up time:</b>	5-8 minutes
<b>Power supply:</b>	220V/50Hz
<b>Power consumption:</b>	100W
<b>Dimensions:</b>	355 x 170 x 77mm
<b>Weight:</b>	1.5kgs
<b>Warranty:</b>	1 year

## Safety!

- Always remember to switch your pouch laminator off after use. Leaving it on for long periods can cause damage to the laminator and is a health and safety hazard
- Always put the sealed end of the pouch into the laminator first
- **NEVER** laminate metal objects such as keys or coins
- **NEVER** use the laminator near water and do not leave the laminator next to a hot area such as a radiator
- Always wrap the power cord around safely after use and do not leave it dangling where it could cause an accident
- Do not allow children to use the laminator, unless supervised
- If your laminator stops working, do not try to fix it yourself by disassembling the machine. Contact your supplier for advice
- Do not operate the laminator if the power cable is damaged in any way
- Do not use this appliance for anything other than it's intended purpose

**Please note, if you do not follow the safety guidelines above and your laminator breaks, you will not be covered under warranty.**

## Warranty & Incorrect Use

### IMPORTANT INFORMATION

Your laminator should reach you in perfect condition, however please retain all original packaging once you have unpacked your laminator in case you need to return it. If your laminator arrives damaged or faulty in anyway, this must be reported to your supplier immediately. If you send your laminator back for repair under warranty at any time, then the warranty may be void if the laminator is not packaged correctly and as a result is damaged in transit. Unauthorised repair or attempts to service the unit will invalidate the warranty.

Your Peak Pouch Laminators include a 1 year warranty on defective parts under normal operating conditions. THIS DOES NOT COVER any jams, misfeeds or wrap arounds caused by operator error and you will be liable for the repair costs (including delivery charges). The warranty does not cover the heated rollers. The warranty is for a period of one year from the date of purchase by the original consumer.

Please note that attempting to laminate any type of unsuitable documents (for example multiple cutouts, textiles, food matter, documents exceeding the maximum thickness or documents too large or small for the pouch) may result in jamming. Damage caused by incorrect use or failing to follow the instructions are not covered within the warranty.

