

Product instruction manual
A3 Pouch Laminating System
Peak Instant - PI-320



Peak laminators have been designed to be user friendly, however we strongly recommend you take a few minutes to read through this manual to ensure correct operation.


Keep this manual safe for future reference.



Thank you for purchasing the Peak Instant PI-320. Peak laminators are designed to give you professional, high quality results, quickly and easily. Please take a few minutes to read through this important document as any **damage caused to your laminator by user error is not covered under warranty.**

How to use your laminator

- 1) Carefully remove the laminator from all of its packaging and place it on a flat, level surface. Make sure you keep the original packaging somewhere safe (in case this is needed in the future).
- 2) Press the Power Switch to turn the laminator power on. The power switch is located on the left hand side of the system. All the lights will illuminate and flash and a buzzer will sound.
- 3) Decide which micron thickness setting you need (75 micron which is 150 total, 100 micron which is 200 total or 125 micron which is 250 total) and prepare your document by placing it in the selected pouch. You must leave an even border around the edge of your document when it is in the pouch. **This is a card carrier free laminator but we do recommend the use of a Lifejacket® when laminating cut up pieces (see next page)**
- 4) Press the mode button to select the desired micron setting: 75, 100 or 125. This will cycle through all the settings.
- 5) Open the top flap on the laminator, pouches are fed into the laminator from the rear.
- 6) Once the relevant light stops flashing, you are ready to laminate. Place the pouch on the flap in the direction of the arrow, the document will be fed from the REAR FEED PLATE. Make sure the pouch goes in straight and SEALED END FIRST. Once laminated, the finished document will appear at the front exit of the laminator.

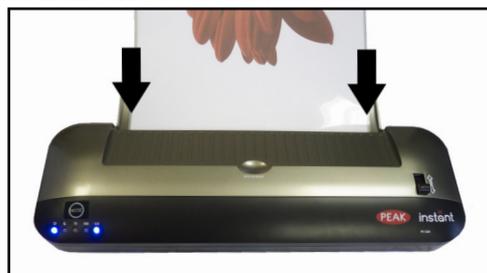

! Do not tug or pull the document as it comes out of the front of the laminator. Wait until it becomes free.

- 7) If you misfeed the document, switch the forward/reverse button to reverse and the document will come back out of the system.
- 8) To save energy and for enhanced safety, the laminator will automatically go into sleep mode when it has not been in use for 30 minutes. To wake the system from sleep mode, simply press the mode button. Turn your laminator off after use and do not leave running for prolonged periods of time.

Please note: When a jam occurs or lamination stops due to the reverse button not being set in the correct position, the machine will alert the user by buzzing and flashing via the power/standby LED indicators. To remove the jam the user initially will have to push the reverse button to the Reverse position, then press the MODE button to stop the alert. The machine will then reverse. After any jamming has been removed, push the Reverse button to the Forward position for normal lamination.

If lamination has stopped due to the incorrect positioning of the Reverse button, the user initially will have to push the reverse button to the correct position (either forward or reverse) and press the MODE button again to stop the alert. The machine will then laminate normally. In principle, when jamming has occurred, or the roller has stopped running for a period of 2 seconds, the machine will signal an alert. To cancel the alert, press the MODE button. The reverse/forward button then functions as before.



Don't overlap



Leave an even border



Don't laminate open end first



Never laminate cut up pieces without using a Lifejacket® or you risk jamming and damaging your laminator (this will not be covered under warranty)



What is a 'Lifejacket®'?


The Lifejacket® is a highly durable patented product made from Teflon® that should be used when laminating cut-up, odd shaped pieces (such as shapes, letters, signs as show above) to prevent damage to your laminator and potential jamming.

Why use a Lifejacket®?

- Protect your laminator from jamming
- Extend the life of your laminator by using the Lifejacket® - stops adhesive seeping onto the rollers
- Eliminate repair bills as this product keeps your laminator working at an optimum level
- Available in A4, A3 and A2 sizes to protect documents of all sizes

Ask your supplier for more details.

Parts and Features

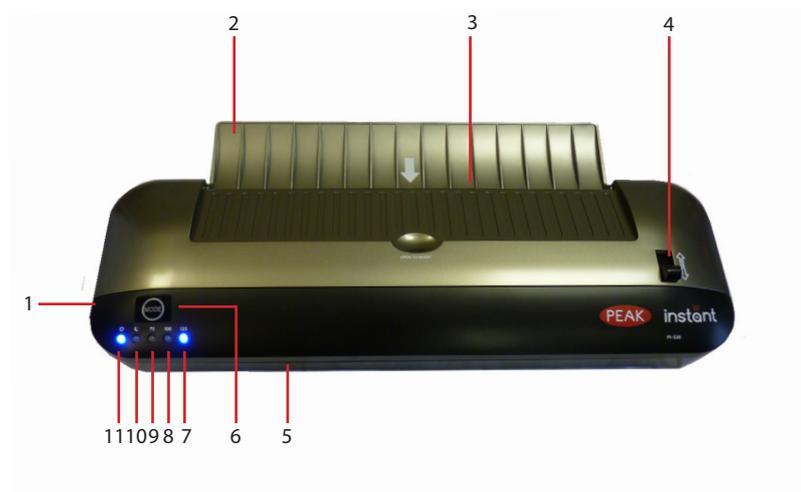

1. Power Switch I/O
2. Lamination guide feeder
3. Insertion slot
4. Forward / Reverse switch
5. Feed out slot
6. Lamination MODE setting button
7. 250 (125+125) Micron LED
8. 200 (100+100) Micron LED
9. 150 (75+75) Micron LED
10. Sleep LED
11. Power/Cold LED

Technical Specifications

| | |
|---------------------------------|------------------|
| Laminating speed: | 500mm/minute |
| Laminating width: | 330mm / A3 |
| Maximum pouch thickness: | 250 micron |
| Laminating temperature: | Preset |
| Warm up time: | 1 minute |
| Power supply: | 220V-240/50Hz-60 |
| Power consumption: | 1350W |
| Dimensions: | 476 x 150 x 89mm |
| Weight: | 3.2kgs |
| Warranty: | 1 year |

Micron Setting Switch

The micron setting switch is designed to allow you to laminate using 3 different laminating pouches 150 micron (75 x 75mic), 200 micron (100 x 100mic) or 250 micron (125 x 125mic).

Safety!

- Always remember to switch your pouch laminator off after use. Leaving it on for long periods can cause damage to the laminator and is a health and safety hazard
- **NEVER** laminate metal objects such as keys or coins
- **NEVER** use the laminator near water and do not leave the laminator next to a hot area such as a radiator
- Always wrap the power cord around safely after use and do not leave it dangling where it could cause an accident
- Do not allow children to use the laminator, unless supervised
- If your laminator stops working, do not try to fix it yourself by disassembling the machine. Contact your supplier for advice
- Do not operate the laminator if the power cable is damaged in any way
- Do not use this appliance for anything other than it's intended purpose

Please note, if you do not follow the safety guidelines above and your laminator breaks, you will not be covered under warranty.

Warranty & Incorrect Use

IMPORTANT INFORMATION

Your laminator should reach you in perfect condition, however please retain all original packaging once you have unpacked your laminator in case you need to return it. If your laminator arrives damaged or faulty in anyway, this must be reported to your supplier immediately. If you send your laminator back for repair under warranty at any time, then the warranty may be void if the laminator is not packaged correctly and as a result is damaged in transit. Unauthorised repair or attempts to service the unit will invalidate the warranty.

Your Peak Pouch Laminator includes a 1 year warranty on defective parts under normal operating conditions. **THIS DOES NOT COVER** any jams, misfeeds or wrap arounds caused by operator error and you will be liable for the repair costs (including delivery charges). The warranty does not cover the heated rollers. The warranty is for a period of one year from the date of purchase by the original consumer.

Please note that attempting to laminate any type of unsuitable documents (for example multiple cutouts, textiles, food matter, documents exceeding the maximum thickness or documents too large or small for the pouch) may result in jamming. Damage caused by incorrect use or failing to follow the instructions are not covered within the warranty.

